

Section 6 . 1

List of Contents

1	Safety Precautions	1
1.1	General	1

1 Safety Precautions

1.1 General

When operating the ADC System, you should always make sure, that the following safety checks have been taken before bringing the ADC System into use:

- Make sure that the various components of the ADC System are installed in places where they can be constantly observed.
- Do not bypass or disable any incorporated safety features.
- Always disconnect any components of the ADC System from the mains before carrying out service or maintenance.
- Troubleshooting, or electrical or mechanical repairs, may only be carried out by qualified service personnel.
- AGFA-Gevaert reserves the right to modify and improve their equipment in order to adapt them to the latest technical standards.

There are no user-serviceable parts inside the ADC PRID-Station or Processing Station. Perform no other operations on the ADC PRID-Station or Processing Station than the ones described in the *ADC Compact Basic System* manual.

